



Bitspower®

Summit CPU Block for LGA 4189 POM Edition


◀ 安裝方式/Installation/安装方式

Step 1

CPU散熱器扣具需扣至CPU冷頭上。

The fastener of CPU radiator needs to be buckled in CPU water block.

CPU散热器扣具需扣至CPU冷头上。

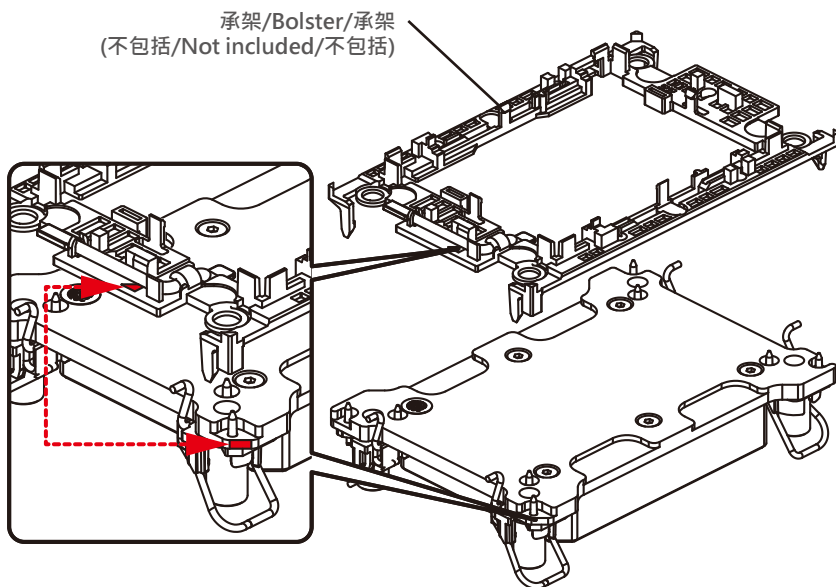


Step 2


適量使用導熱膏。

Using appropriate amount of thermal paste.

适量使用导热膏。

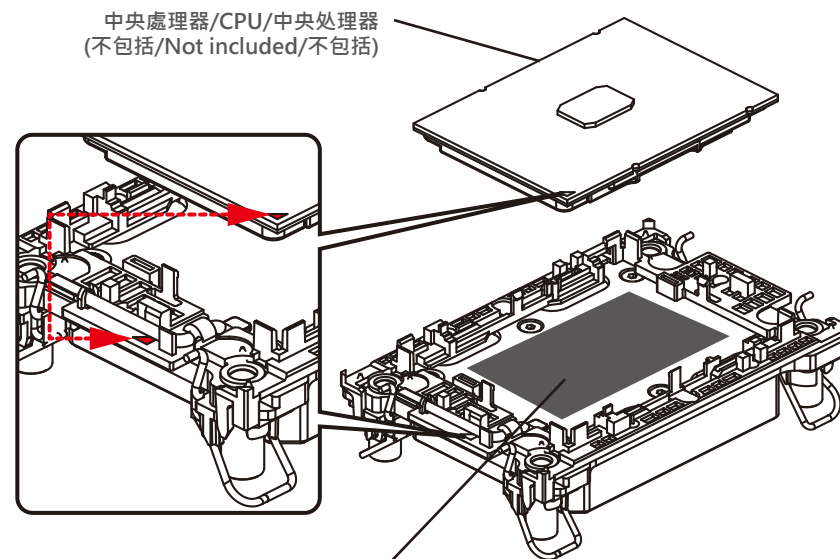

導熱膏/Thermal paste/导热膏

 

BPA-TP1-2.5G



本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知，產品顏色與配件以實物為準。

Bitspower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.


本公司保留对产品的的设计更改以及解释的权力，如有更动恕不另行通知，产品颜色与配件以实物为准。

Step 3

安裝CPU。

Installing the CPU.

安装CPU。

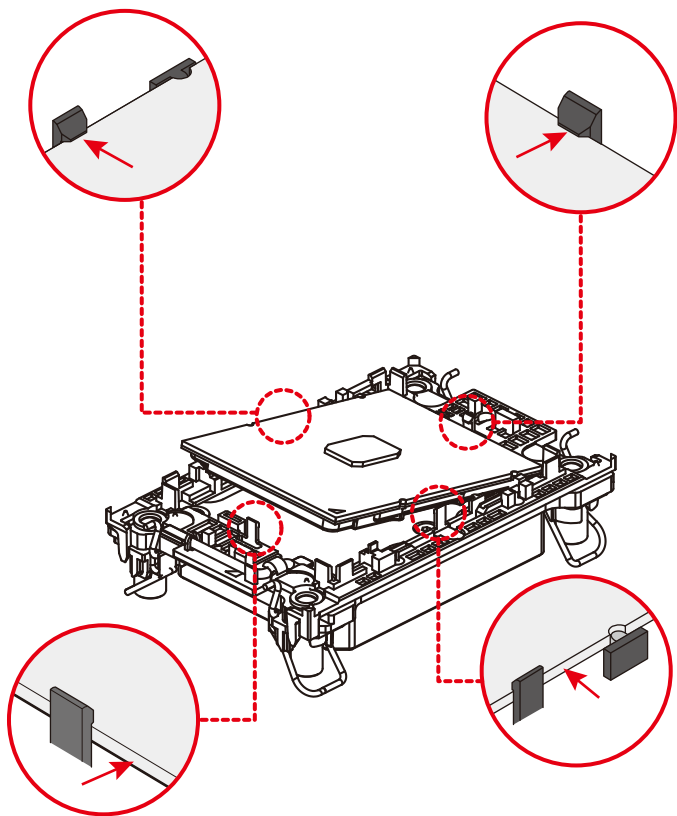


Step 4

CPU扣具（冷頭端）彈簧需壓至定位後放上水冷頭。

The CPU spring (water cooling block side) must be pressed into position and then placed on the cooling block.

CPU扣具（冷头端）彈簧需压至定位后放上水冷头。

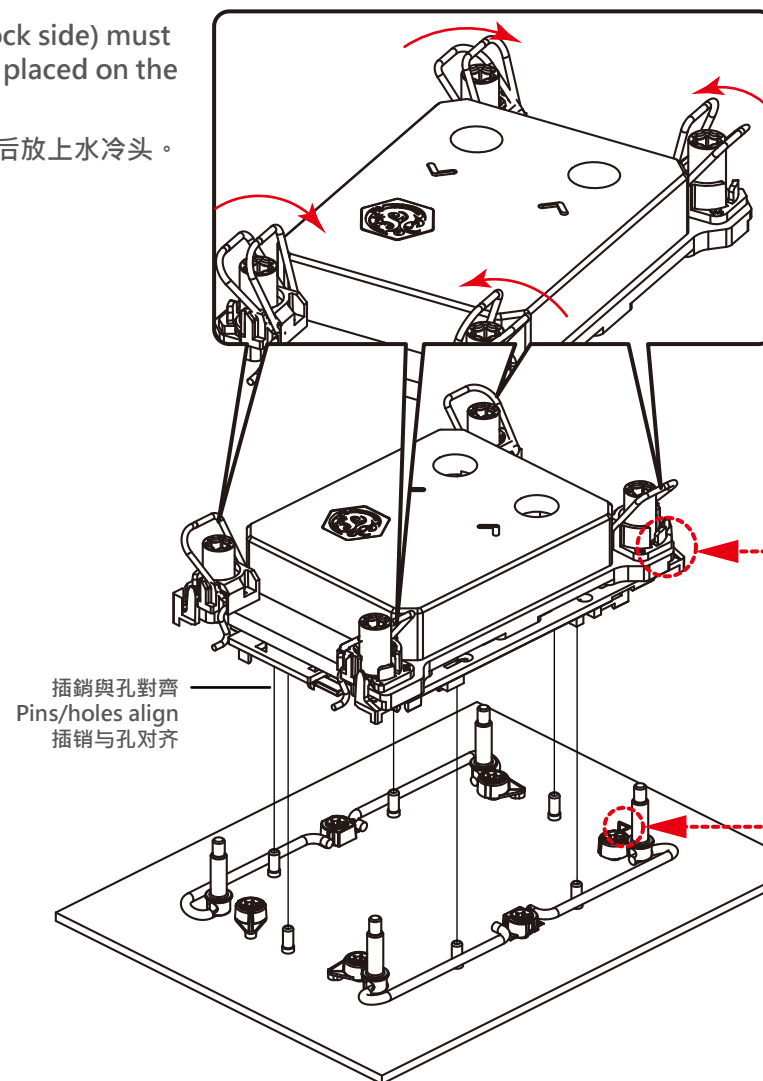

本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知，產品顏色與配件以實物為準。

Bitspower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.


本公司保留对产品的的设计更改以及解释的权力，如有更动恕不另行通知，产品颜色与配件以实物为准。

Step 5

冷頭至定位後，彈簧壓回原位置（注意扣具倒鉤需要勾住）。

After the water cooling block is positioned, the spring should be pressed back to the initial position.
(Note: The barb should be hooked.)

冷头至定位后，弹簧压回原位置（注意扣具倒钩需要勾住）。

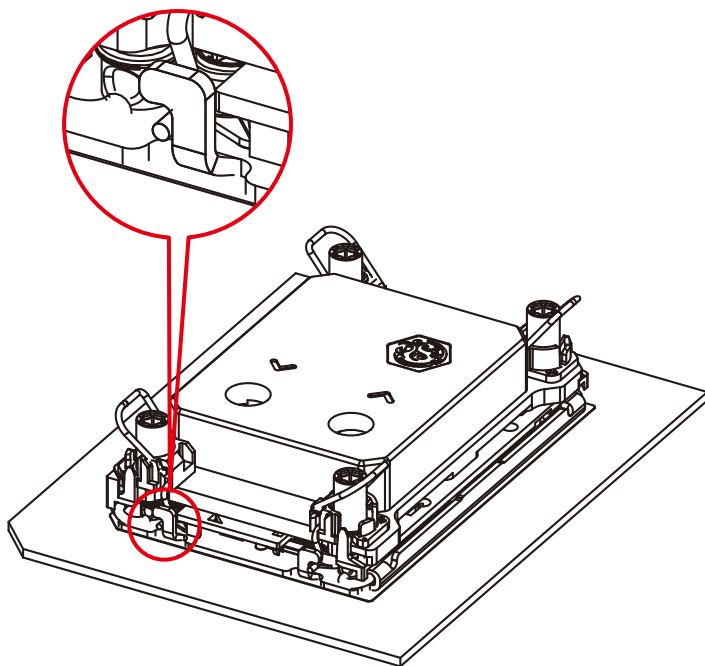


Step 6

螺帽按1→2→3→4依序順時針向下鎖固（單次一至兩圈）
鎖至支架倒鉤扣於紅銅即可判定到位。

Screw need to be locked in the clockwise order of 1→2→3→4→1→2.....(Note:Don't turn screws to the end all at once. Turn a screw once or twice, and then turn the other. In this way,it can avoid uneven stress of the water cooling block.).

When the barb is fixed on the red copper, it indicates that the screw is in place.

螺帽按1→2→3→4依序顺时针向下锁固（单次一至两圈）
锁至支架倒钩扣于红铜即可判定到位。

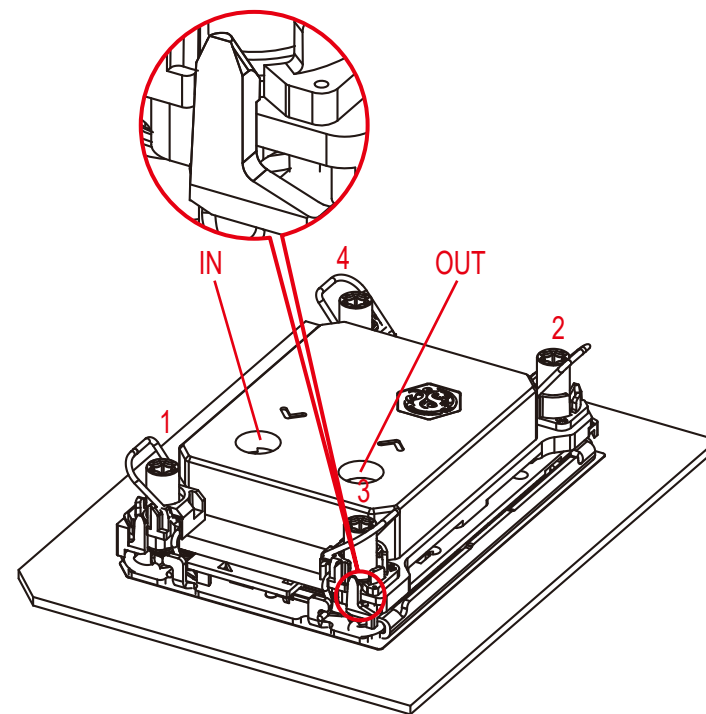

本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知，產品顏色與配件以實物為準。

Bitpower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.

本公司保留对产品的设计更改以及解释的权力，如有更动恕不另行通知，产品颜色与配件以实物为准。



注意：Bitpower建議消費者使用蒸餾水、純淨水，加入Bitpower的染劑作為水冷液使用；如客戶自行選購的水冷液導致電鍍層剝落、水道堵塞、水泵轉



動不正常、水箱管破裂或密封圈變型以致漏水等及其它不可抗力之問題時，消費者自行承擔相關產品責任。

未注水前，請勿啟動水泵電源。

Notice: Bitpower recommends that consumers add the Bitpower dye to distilled water or purified water for their water-cooling liquid. If the



consumer chooses different water-cooling liquids, the resulting impurities may cause peeling of the coating on some of the hardware, water channels blockage by built-up residue, improper operation of the water pump, water tank tube breakage, and o-rings deformation leading to leakage. Any issues related to the use of inappropriate water-cooling liquid will be the responsibility of the consumer.

Do not turn on the pump if the reservoir is empty.

注意：Bitpower 建议消费者使用蒸馏水、纯净水，加入Bitpower的染剂作为水冷液使用；如客户自行选购的水冷液导致电镀层剥落、水道堵塞、水泵转



动不正常、水箱管破裂或密封圈变型以致漏水等及其它不可抗力之问题时，消费者自行承担相关产品责任。

未注水前，请勿启动水泵电源。



注意，跑水前，請先確認所有零件已安裝在正確的位置上，在不開主機，單開水泵的情況下，進行24小時的跑水測試，確保無漏水情況後再開主機，避免發生漏水而導致電腦零件的損壞。

Before fill in water, please make sure all the component be installed correctly, avoiding leaking happen and destroy the PC component.

注意，跑水前，請先確認所有零件已安裝在正確的位置上，在不開主機，單開水泵的情況下，進行24小時的跑水測試，確保無漏水情況後再開主機，避免發生漏水而導致電腦零件的損壞。

本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知，產品顏色與配件以實物為準。

Bitpower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.

本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知，產品顏色與配件以實物為準。