



Bitspower®

請撕下銘板保護膜
Please tear off the protective film on the mirror plate.

Design for ASUS TUF Gaming GeForce RTX 3070

配件



①	BP-VG3070ASF	1組
②	1.0 mm 導熱墊片	3片
③	0.5 mm 導熱墊片	2片
④	M2.5螺母	2個
⑤	華司	2片
⑥	背板	1片
⑦	M2.5 x 10螺絲	18支

Accessories

①	BP-VG3070ASF	1 PCS
②	1.0 mm Thermal pad	3 PCS
③	0.5 mm Thermal pad	2 PCS
④	M2.5 Nut	2 PCS
⑤	Washer	2 PCS
⑥	Back plate	1 PCS
⑦	M2.5 x 10 screw	18 PCS

配件

①	BP-VG3070ASF	1组
②	1.0 mm 导热垫片	3片
③	0.5 mm 导热垫片	2片
④	M2.5螺母	2个
⑤	华司	2片
⑥	背板	2片
⑦	M2.5 x 10螺丝	18支

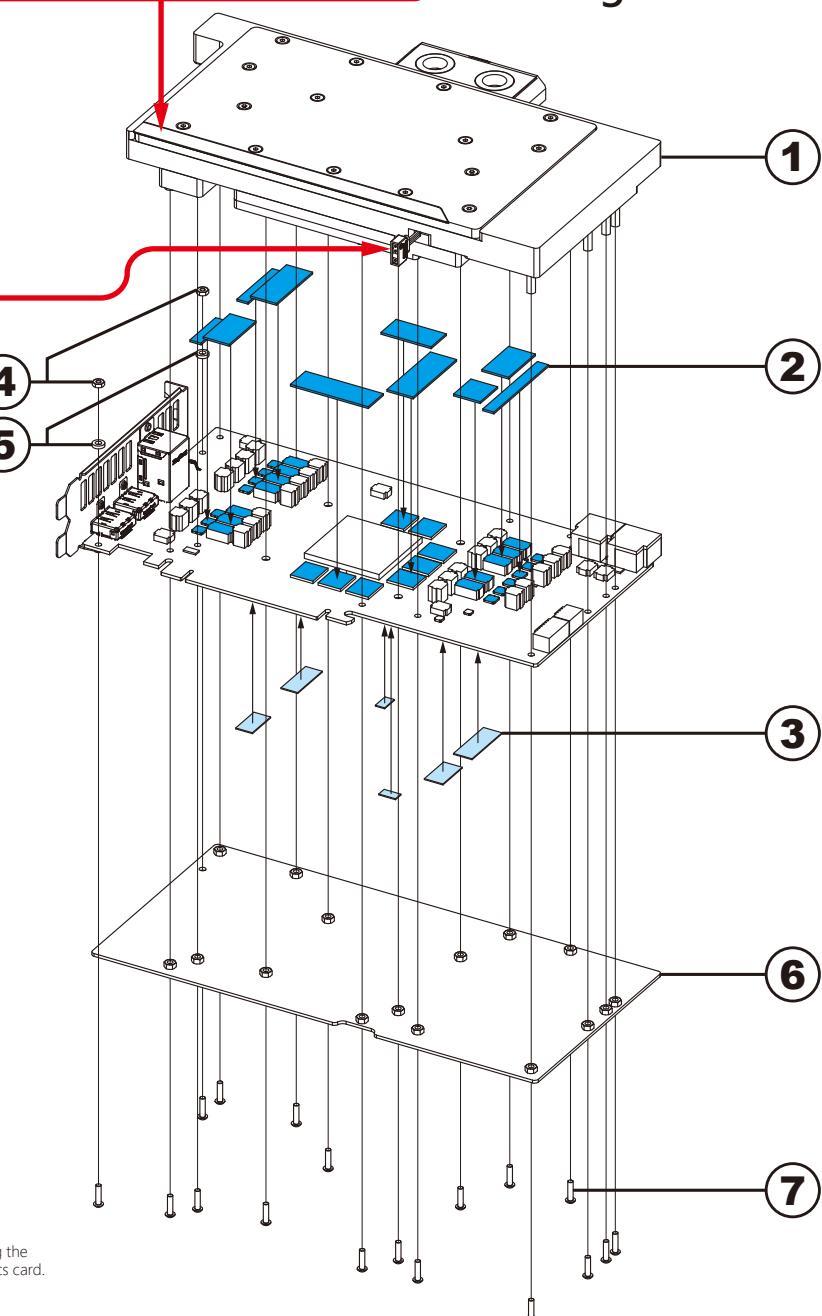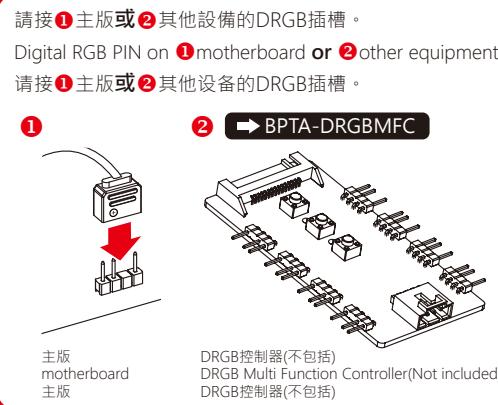

請從冷頭拆下背板後再依照說明書，把冷頭、背板安裝到顯卡上。

Please remove the back plate from the waterblock, and then according the installation guide to install the waterblock, back plate with your graphics card.



请从冷头拆下背板后再按照说明书，把冷头、背板安装到插件上。

本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知。產品顏色與配件以實物為準。

Bitspower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.

本公司保留对产品的设计更改以及解释的权力，如有更动恕不另行通知。产品颜色与配件以实物为准。



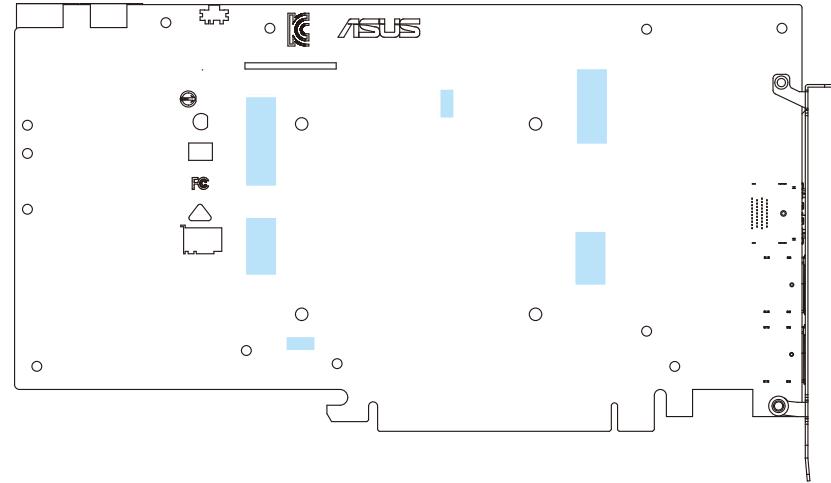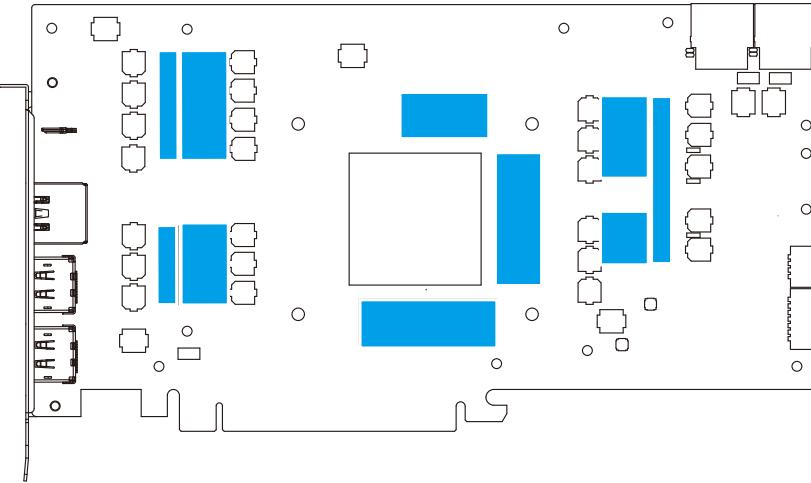

ASUS TUF Gaming GeForce RTX 3070

導熱墊片和導熱膏的正確應用位置

- 1.0 mm導熱墊片
- 0.5 mm導熱墊片

Applying the thermal pad and thermal paste on correct positions.

- Using appropriate amount of thermal paste.
- 1.0 mm Thermal pad
- 0.5 mm Thermal pad

⚠ Before filling in the water, please make sure all the components are installed correctly. To prevent any leakage which may damage the PC components, please perform a 24-hour leaking test with only the pump connected to the power supply.

导热垫片和导热膏的正确应用位置

- 适量使用导热膏
- 1.0 毫米导热垫片
- 0.5 毫米导热垫片

⚠ 注意，跑水前，请先确认所有零件已安装在正确的位上，在不开主机，单开水泵的情况下，进行24小时的跑水测试。确保无漏水情况后再开主机，避免发生漏水而导致电脑零件的损坏。



注意：Bitspower建議消費者使用蒸餾水、純淨水，加入Bitspower的染劑作為水冷液使用；如客戶自行選購的水冷液導致電鍍層剝落、水道堵塞、水泵轉

！ 動不正常、水箱管破裂或密封圈變型以致漏水等及其它不可抗力之問題時，消費者自行承擔相關產品責任。

未注水前，請勿啟動水泵電源。

Notice: Bitspower recommends that consumers add the Bitspower dye to distilled water or purified water for their water-cooling liquid. If the

！ consumer chooses different water-cooling liquids, the resulting impurities may cause peeling of the coating on some of the hardware, water channels blockage by built-up residue, improper operation of the water pump, water tank tube breakage, and o-rings deformation leading to leakage. Any issues related to the use of inappropriate water-cooling liquid will be the responsibility of the consumer.

Do not turn on the pump if the reservoir is empty.

注意：Bitspower建议消费者使用蒸馏水、纯净水，加入Bitspower的染剂作为水冷液使用；如客户自行选购的水冷液导致电镀层剥落、水道堵塞、水泵转

！ 动不正常、水箱管破裂或密封圈变型以致漏水等及其它不可抗力之问题时，消费者自行承担相关产品责任。

未注水前，请勿启动水泵电源。

注意：當使用測氣產品測試水路時，為避免由於壓力過大導致產品損壞，輸入的壓力請不要超過0.5kg/cm² (Bar)，如因壓力過大造成產品損壞，將由客戶自行承

！ 擔。嚴禁客戶在水路有水及水泵開啟的情況下進行氣體飽壓測試。

Notice: When using leak tester on water cooling loop, in order to avoid product damage due to excessive pressure, the input pressure should not

！ exceed 0.5kg/cm² (Bar). If the product is damaged due to excessive pressure, it will be borne by the customer. Forbidden to use the leak teser when there is water in the loop or the pump is runing.

注意：当使用测气产品测试水路时，为避免由于压力过大导致产品损坏，输入的压力请不要超过0.5kg/cm² (Bar)，如因压力过大造成产品损坏，将由客户自行承

！ 担。严禁客户在水路有水及水泵开启的情况下进行气体饱压测试。

！ 注意：跑水前，請先確認所有零件已安裝在正確的位置上，在不開主機，單開水泵的情況下，進行24小時的跑水測試，確保無漏水情況後再開主機，避免發生漏水而導致電腦零件的損壞。

Before fill in water, please make sure all the component be installed correctly, avoiding leaking happen and destroy the PC component.

注意：跑水前，请先确认所有零件已安装在正确的位置上，在不开主机，单开水泵的情况下，进行24小时的跑水测试，确保无漏水情况后再开主机，避免发生漏水而导致电脑零件的损坏。

本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知，產品顏色與配件以實物為準。

Bitspower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.

本公司保留对产品的设计更改以及解释的权力，如有更动恕不另行通知，产品颜色与配件以实物为准。