


◀ 安裝方式/Installation/安装方式

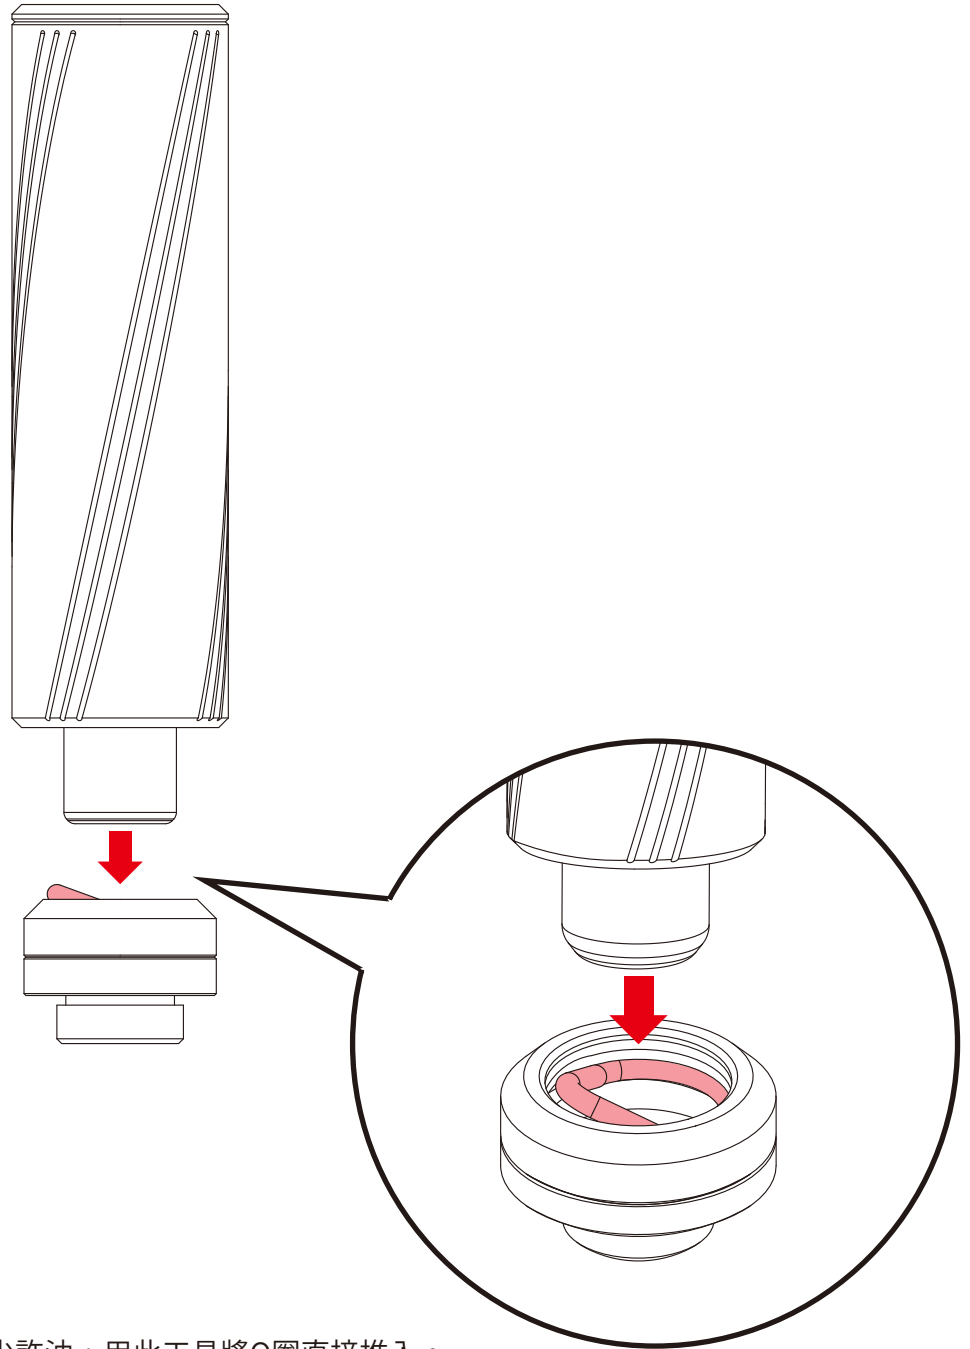

使用前確認工具前端沾有少許油，用此工具將O圈直接推入。

Before using, please ensure that the tip has been lubricated with oil.
Use this tool to push the O-ring in.

使用前确认工具前端沾有少许油，用此工具将O圈直接推入。



注意：跑水前，請先確認所有零件已安裝在正確的位置上。在不開主機、單開水泵的情況下，進行24小時的跑水測試，確保無漏水情況後再開主機，避免發生漏水而導致電腦零件的損壞。

Before filling in the water, please make sure all the components are installed correctly. To prevent any leakage which may damage the PC components, please perform a 24-hour leaking test with only the pump connected to the power supply.

注意：跑水前，请先确认所有零件已安装在正确的位置上。在不开主机、单开水泵的情况下，进行24小时的跑水测试，确保无漏水情况后再開主机，避免发生漏水而导致电脑零件的损坏。

本公司保留對產品的設計更改以及解釋的權力。如有更動恕不另行通知，產品顏色與配件以實物為準。

Bitspower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.

本公司保留对产品的設計更改以及解釋的權力。如有更動恕不另行通知，產品顏色與配件以實物為準。