




Bitpower Water Block

Designed for MSI Z170A Gaming M9 ACK Installation Guide

Step1

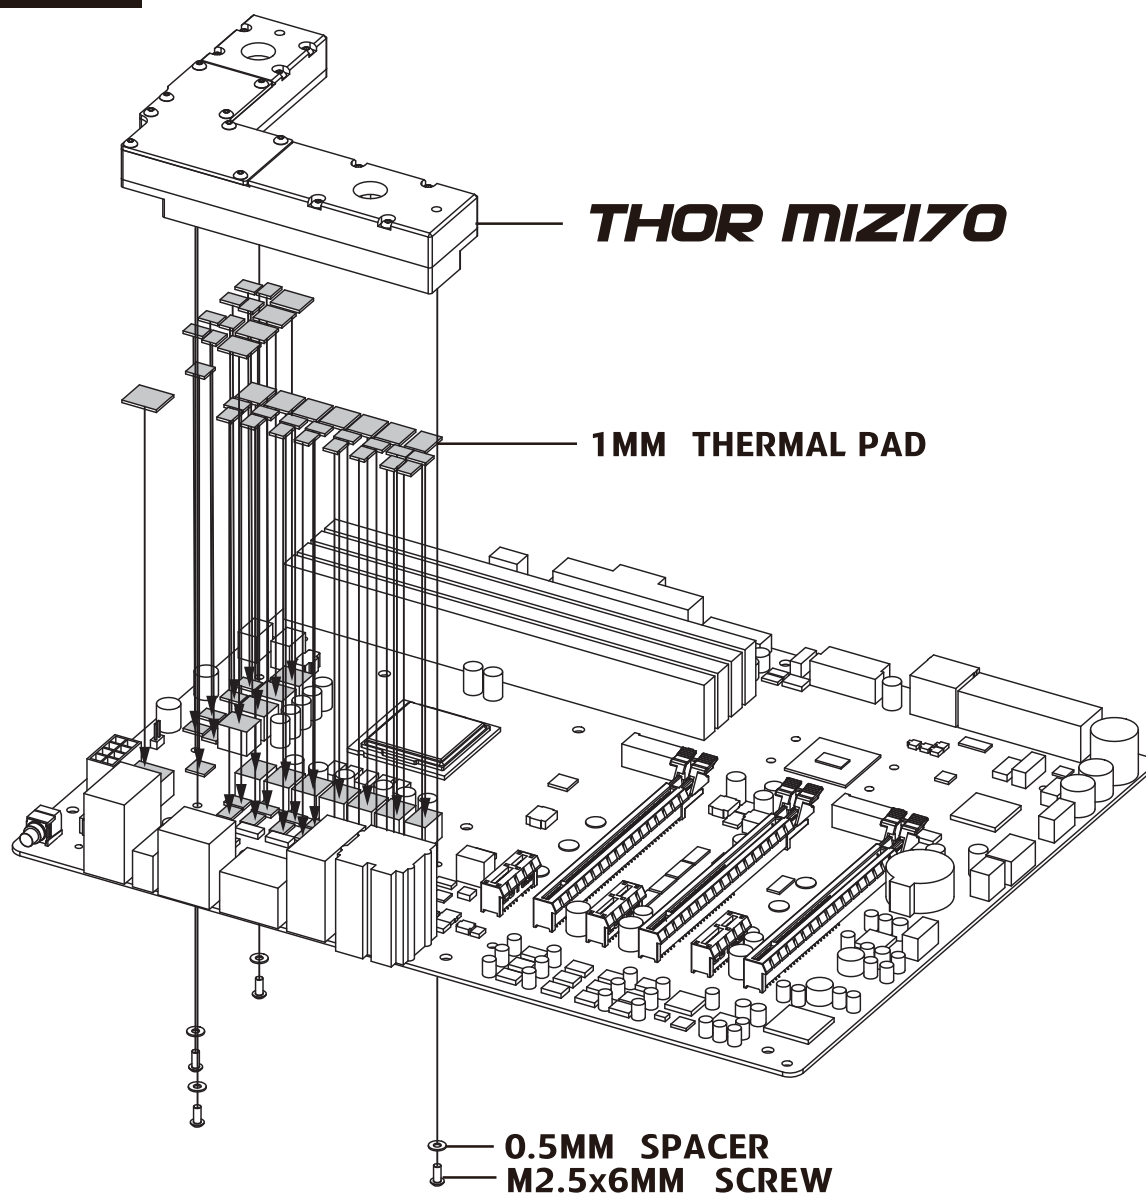

THOR MIZI70

- | | | |
|--|-----------------------|--------------|
| | 0.5MM SPACER | 4 PCS |
| | M2.5x6MM SCREW | 4 PCS |

Spare Screws

- | | | |
|--|-------------------------|--------------|
| | M2.5x10 MM SCREW | 2 PCS |
| | M2.5x 6 MM SCREW | 2 PCS |
| | BP-SC-M5IM25L4 | 2 PCS |

NOTE: PLEASE PERFORM 24 HOURS LEAKAGE TEST BEFORE USE.



Important



Before fill in water, please make sure all the component be installed correctly , avoiding leaking happen and destroy the PC component.




Bitpower Water Block

Designed for MSI Z170A Gaming M9 ACK Installation Guide


Step2

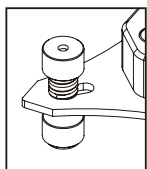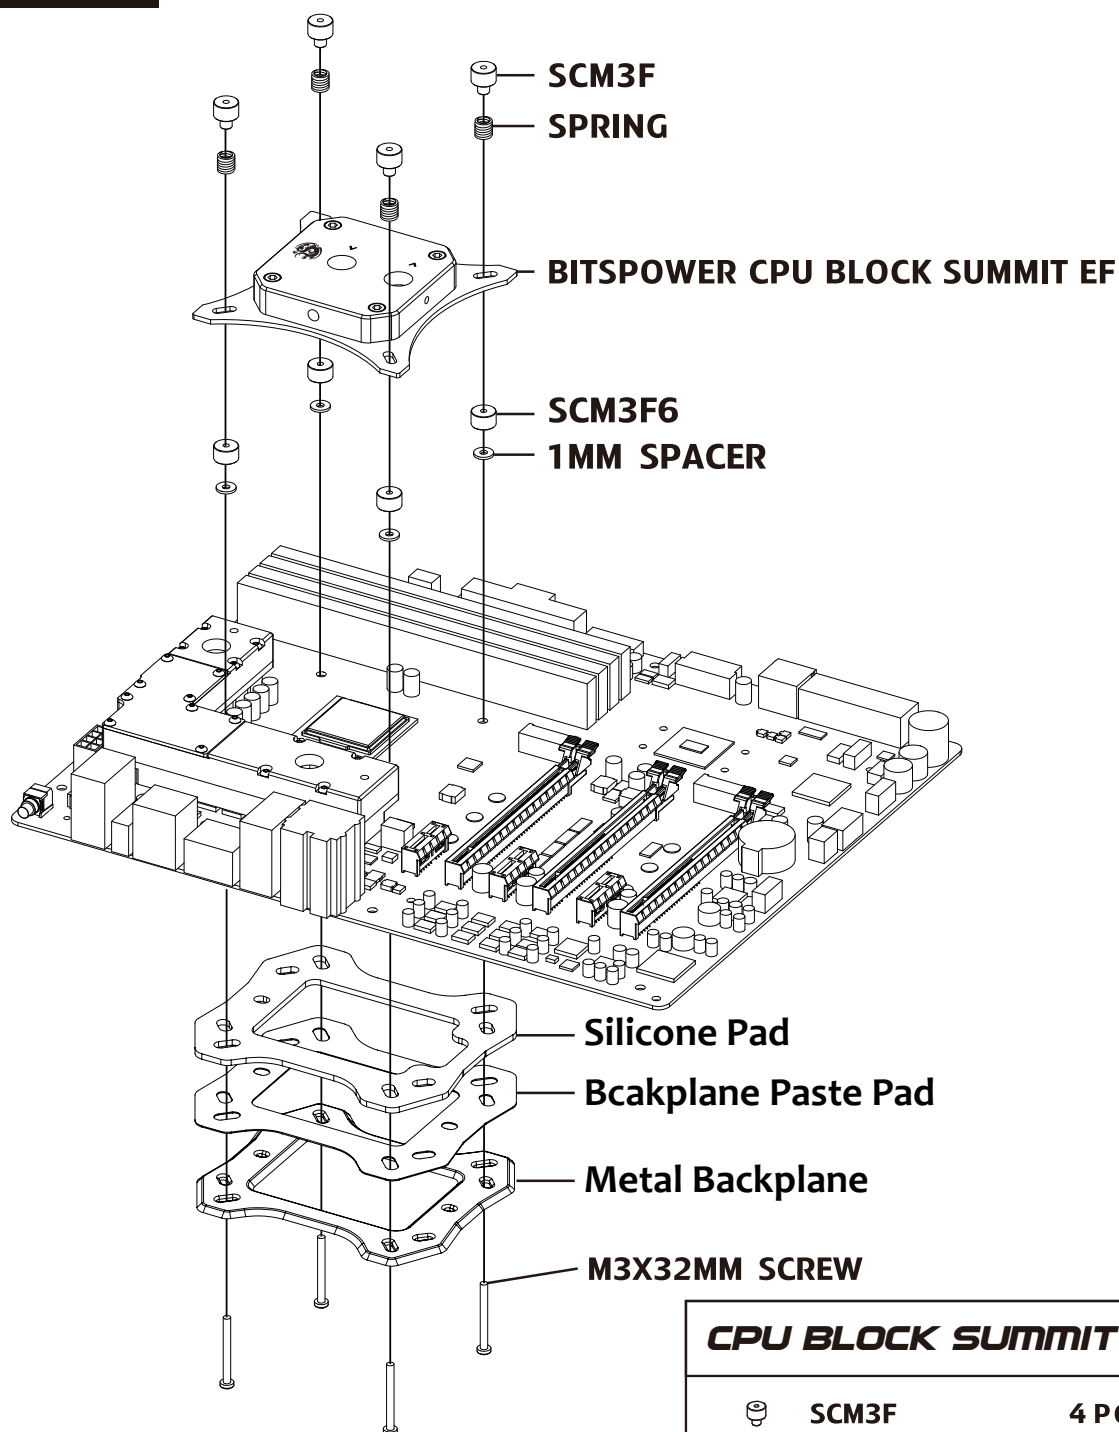

✗

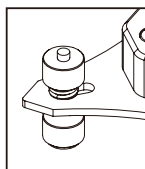

✗

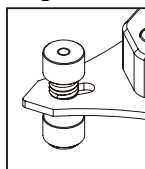

○

Please refer to the illustration lock nut to the position.

CPU BLOCK SUMMIT EF

	SCM3F	4 PCS
	SPRING	4 PCS
	SCM3F6	4 PCS
	1MM SPACER	4 PCS
	M3x32MM SCREW	4 PCS

NOTE: PLEASE PERFORM 24 HOURS LEAKAGE TEST BEFORE USE.